




24RK/70 REKEYABLE DISKUS



REKEYING INSTRUCTIONS:


1. INSERT KEY AND OPEN SHACKLE COMPLETELY
2. INSERT PIERCING TOOL (NAIL, PIERCING TOOL) INTO OPEN SHACKLE HOLE, RIGHT UNDERNEATH VISIBLE BRASS PIN
3. WITHDRAW RETAINER INCLUDING CYLINDER BY PULLING THE KEY
4. WITHDRAW KEY AND TAKE CYLINDER OUT OF RETAINER
5. REKEY OR REPLACE CYLINDER
6. REINSERT CYLINDER INTO RETAINER AND INSERT KEY
7. ROTATE KEY APPROX. 110° TO ALLOW FIT OF TAILPIECE TO LOCKING MECHANISM
8. REINSERT RETAINER INCLUDING CYLINDER INTO LOCK SO THAT TAILPIECE ENGAGES LOCKING MECHANISM
9. WITHDRAW PIERCING TOOL
10. CHECK PROPER FIT OF RETAINER AND LOCKING FUNCTION

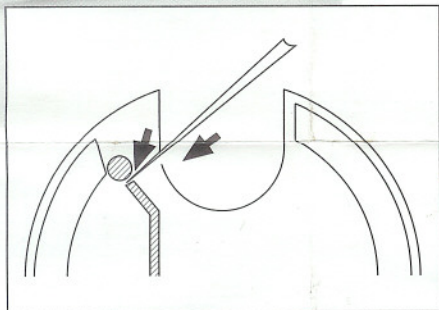

REMARK:

THE RETAINER IS LOCKED IN THE BODY BY THE SHACKLE BOLT ON THE RIGHT SIDE PLUS BY A FURTHER RETAINER BOLT ON THE LEFT SIDE. IN LOCKED POSITION THE RETAINER BOLT IS DEAD BOLTED BY THE SHACKLE. THE RETAINER BOLT CAN ONLY BE RELEASED WHEN THE SHACKLE IS COMPLETELY OPENED.

ABUS CANNOT BE HELD LIABLE FOR ANY MALFUNCTION CAUSED BY INCORRECT REKEYING.

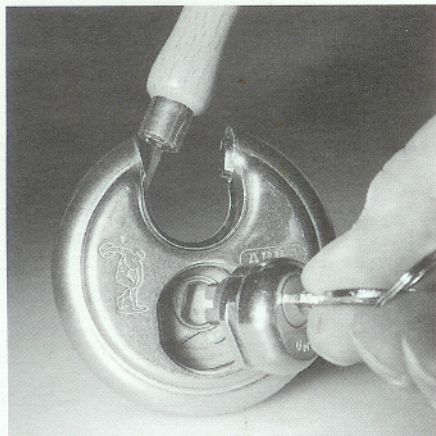

More
Security
with **ABUS**